

Wheel Hub Removal Tool Instructions



Safety Information

⚠ Warning!

- Keep your work area clean and well lit. Cluttered or dark areas invite accidents.
- Keep children and bystanders away while using this product.
- **DO NOT** use this product while you are tired or under the influence of drugs, alcohol, or medication.
- Use the appropriate safety equipment for your job. Wear ANSI and OSHA-approved eye and ear protection and heavy-duty work gloves when using this product.
- **DO NOT** wear loose clothing or jewelry while using this product. Keep your hair, clothing, and gloves away from any moving parts.
- Prior to servicing a vehicle, turn off its engine and refer to its manufacturer's service and repair manual for instructions on how to safely secure the vehicle in place with chocks, jacks, stands, etc.
- Use this product **ONLY** in accordance with these instructions and for its intended purpose. **DO NOT** allow people unfamiliar with this product or these instructions to operate it.
- **DO NOT** overreach. Keep proper footing and balance at all times.
- Maintain this product. Check for misalignment or binding of parts, breakage of parts, and any other condition that may affect this product's operation. If this product becomes damaged, have it repaired before further use.

Package List

- | | |
|----------------------|-------------------------|
| 1 × Hub Removal Tool | 2 × Hooks |
| 24 × Nuts | 2 × Gloves |
| 14 × Spring Gaskets | 2 × Protective stickers |
| 14 × Flat Gaskets | |

Operation

1. Park your vehicle on level ground, activate its parking brake, and turn off the engine. Allow your vehicle to cool if it has become hot through recent use.
2. Chock your wheels or jack up the vehicle. For best results, secure a raised vehicle with one or more jack stands or other appropriate supporting equipment.
3. Remove the cover and the brake from the wheel you are working on.
4. Unscrew the lug nuts from the studs on the wheel hub with your lug wrench or other tool (not included).
5. Fit the tool onto the hub's studs and secure it with the provided washers and nuts.
6. Hit the tail of the tool with a hammer until the hub is knocked out of its axle.
7. Remove the hub by hand.

Specifications

Material	45# Steel	
Tool Dimensions	13.8×7.9×5 in.	35×20×12.6 cm
Hook Dimensions	8.1×1.8×0.2 in.	20.5×4.5×0.6 cm
Nut Sizes	12mm-1.5, 14mm-1.5, 7/16"-20, 1/2"-20, 9/16"-18, & 5/8"-18	
Fitment	5, 6, & 8 Bolted Hubs	
Net Weight	11.7 lb.	5.32 kg

Maintenance

- Clean the tool with a soft damp cloth using a mild detergent or solution after use. Do not rinse it or use abrasive cleaners or caustic chemicals.
- For best results, lubricate the tool with high-quality anti-corrosive oil between uses.
- Check the parts of the tool periodically for any wear or damage. Repair or replace any problematic parts before further use.
- If the tool will not be used for an extended period of time, clean and lubricate it and store in a cool dry place inaccessible to children.

Contact Us

Thank you for choosing our products! If you have any questions or comments, contact us at help@cs-supportpro.com and we'll resolve your issue ASAP!

For a .pdf copy of the latest version of these instructions, use the appropriate app on your smartphone to scan the QR code to the right.

