

Precision Oil Funnel Instructions



Safety Information

⚠ Caution!

- Keep work area clean and well lit. Cluttered or dark areas invite accidents.
- Stay alert, watch what you are doing, and use common sense when using this product.
- Use safety equipment appropriate for your work. Always wear eye protection. If you will be adding oil to a hot engine, carefully avoid all heated surfaces or wear appropriate hand protection.
- Do not overreach. Keep proper footing and balance at all times.
- Be careful of the placement of this funnel, as certain vehicle fluids are corrosive and may damage your vehicle's paint.


Specifications

Material	Nylon 66	
Funnel Volume	2.1 qt.	2 L
Case Dimensions	15.5×11.8×5 in.	39×30×12.5 cm
Net Weight	4.7 lb.	2.15 kg

Operation

1. If you need to measure your vehicle's oil level before use, check while the engine is cold or wait 10–15 minutes after use to allow an accurate reading.
2. Remove the filler cap from your oil reservoir.
3. Join the funnel to the connector which best fits your oil fill port, according to the table below.
4. Gently pour your oil through the funnel.
5. Detach the connector from the fill port and replace the filler cap.
6. Detach the connector from the funnel and wipe away any excess oil.

Parts Diagram

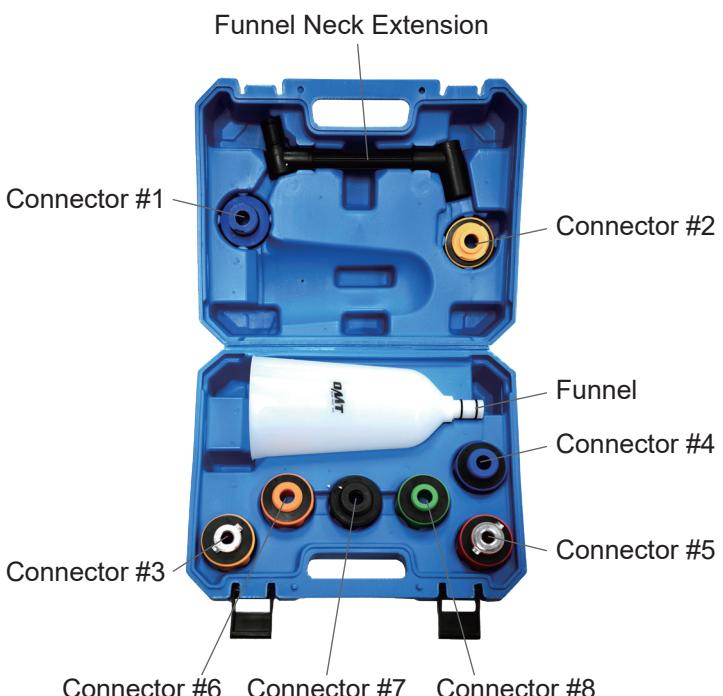

Part	Type	Compatible Make	Compatible Model
Connector #1	¼ Turn	Mazda	Mazda 3 & 6 (2014–2022) Mazda CX-5 (2013–2022)
Connector #2	½ Turn	Audi	All 2.0L EA888 engine vehicles, Allroad (2013–2022), A3 Quattro (2008–2022), A4 Quattro (2009–2022), A5 Quattro (2010–2022), A6 Quattro (2012–2022), Q3 Quattro (2015–2022), Q5 (2011–2022), TT Quattro (2009–2022)
		Volkswagen	Atlas (2018–2022), Beetle (2012–2022), CC (2009–2022), Eos (2009–2016), Golf (2008–2022), GTI (2008–2022), Golf R (2009–2022), Jetta GLI (2008–2022), Passat (2008–2022), Tiguan (2009–2022)
Connector #3	Bayonet	Toyota	All 3.0L & 3.3L V6 engine vehicles
		Lexus	All 3.0L & 3.3L V6 engine vehicles
		Toyota	Highlander (V6), Sienna
Connector #4	M37×3 Threaded	Lotus	Elise, Exige
		Pontiac	Vibe
		Scion	FR-S, Iq, tC, xB, xD, xA, iA
		Toyota	4Runner, Avalon, Corolla, FJ Cruiser, Land Cruiser, Matrix, RAV4, Sequoia, Tacoma, Tundra
Connector #5	Bayonet	Audi	A3, A4, A5, A8, Q7, R8, RS4, RS6, S4, S6, S8
		BMW	1600, 1602, 2800CS, Bavaria, 530i, 320i
		Mercedes	220, 220D, 230, 250, 280S, 280SE, 280SEL, V6 Sprinter CRD (2.7L & 3.0L)
		Porsche	Cayenne, Panamera
		Volvo	244, 245, 264, 265, 740, 760
		VW	Beetle, CC, Cabrio, Eos, EuroVan, GTI, Golf, Jetta, Passat, Phaeton, R32, Rabbit, Touareg
Connector #6	M35×4 Threaded	Ford	Escape (4 cyl. 2008–2014), Explorer Ecoboost (2L, 2012–2013), Focus (2007–2013), Fusion Hybrid (2013), Maverick II (2008)
		Jaguar	XF (2013–2013)
		Land Rover	LR2, Range Rover Evoque (2012–2013)
		Mazda	3, 6, CX-5, Mazdaspeed 3 & 6 (2.3L Turbo), Miata, MX-5
Connector #7	M42×4.5 Threaded	Subaru	BRZ, Impreza, Legacy (4 cyl.), Outback (4 & 6 cyl.)
Connector #8	M32×3.5 Threaded	Acura	Integra, Legend, NSX
		Dodge	All Hemi V8 Engines, Neon, Ram (Cummins Turbo Diesel)
		Ford	All 6.0L Turbo diesel engine vehicles, F150, F250, F350 (6.0L, 6.4L, 6.9L, 7.3L)
		Honda	Accord, Civic, Element, Fit, S2000
		Jaguar	All 4.2L V8 engine vehicles (2003–2009)
		Jeep	Wrangler (2001–2006)
		Land Rover	Defender, Discovery, Range Rover
		Mazda	2
		Nissan	Pathfinder, Sentra

Maintenance

- For best results, clean with a mild detergent and soft cloth after each use. Do not use caustic chemicals or harsh abrasives. Rinse entirely clean and allow time to dry completely before further use.
- Store in a cool dry location away from direct sunlight.

Contact Us

Thank you for choosing our products! If you have any questions or comments, contact us at help@cs-supportpro.com and we'll resolve your issue ASAP!

For a .pdf copy of the latest version of these instructions, use the appropriate app on your smartphone to scan the QR code to the right.

